

한국어

4

English

3

4

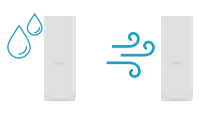
강도조절

한국어

중전

한국어

	- SONIQ에는 약·중·강 세가지 강도가 있습니다. 사용자에게 맞는 강도로 설정 하여 사용하십시오. - 강도 설정은 제품 전원이 ON인 상태에서 전원 버튼을 짧게 누르십시오. 약 → 중 → 강 순으로 반복하여 변경됩니다. - SONIQ에는 메모리 기능이 있습니다. 사용자가 마지막으로 사용한 강도를 기억하고 다음 사용 시 해당 강도로 양치질을 시작합니다.		- 완충 시 최대 50일 사용 가능합니다. (강도별로 강: 30일, 중: 40일, 약: 50일/ 하루 세 번 2분씩 양치질 기준) 사용시간은 사용량에 따라 달라질 수 있습니다. - 본 제품은 무선충전을 지원 합니다. 본체를 전원이 연결된 거치대에 가볍게 올려놓으면 충전이 시작됩니다. - 충전 중 배터리 잔량 80%이하일 경우 적색, 그 이상이면 청색이 켜집니다. 사용 중 배터리 잔량이 20%이하일 경우 적색, 그 이상이면 청색이 켜집니다. - 안전을 위해 충전 거치대와 가까이 지면 동작 되지 않습니다. - 본 제품의 충전 규격은 5V 1A 입니다. 알맞은 규격의 어댑터를 사용하여 주십시오.(5V 1A 이하의 어댑터에서는 충전이 안될수 있습니다. - USB 전원을 연결할 때 물기가 없도록 하십시오. 화재 및 감전의 원인이 될 수 있습니다.
치솔 세척 및 보관			
치솔 헤드 세척 및 보관 방법			

	- 사용 후 즉시 치솔 헤드는 흐르는 물에 깨끗하게 세척하고 건조하여 주십시오. - 치솔에 치약이 남아있거나 건조가 제대로 되지 않으면 세균번식의 원인이 될 수 있습니다. - 세척 및 건조가 끝난 후에는 건조하고, 서늘한 곳에 보관 하여 주십시오.		
치솔 본체 세척 및 보관 방법			
	- 사용 후 치솔 본체는 물 또는 젖은 수건으로 가볍게 세척하여 주십시오. - 세척 후에는 마른 수건으로 닦아 자연 건조하여 주십시오. - 제품에 배터리가 내장되어 있으니 고온 다습한 환경에서 보관하지 마십시오.	A/S 및 유지 보수	
		A/S 본 제품은 6개월간 무상 A/S를 지원합니다. 6개월이 지난 후에는 유상으로 전환됩니다. 판매원 또는 제조사에 A/S를 문의하여 주십시오. (단, 무상 A/S 기간에도 사용자의 과실로 인한 사유라면 유상 A/S로 전환됩니다.) 폐기 본 제품에는 배터리 및 전자부품이 내장되어 있습니다. 배터리 및 전자제품을 지정된 장소에 폐기하지 않으면 환경오염의 원인이 될 수 있으므로 지정된 수거함에 폐기하여 주십시오.	

5

6

Intensity control	한국어
	- SONIQ Toothbrush has three modes: low, medium and high. Use it by setting the intensity that suits you. - To set the intensity, give a very short press to the power button while the product power is on. It repeats and changes from low to high. - The SONIQ Electric Toothbrush has a memory function. It remembers the last intensity you used and starts brushing at that intensity the next time you use it.
Toothbrush cleaning and storage How to clean and store your toothbrush head  Toothbrush cleaning and storage 	- Immediately after use, clean the toothbrush head under running water and dry it. - If there is toothpaste left on the toothbrush or if it is not dried properly, it may cause bacterial growth. - After washing and drying, store in a dry, cool place.
5	

Charging	English
	- It can be used for up to 50 days when fully charged. (By intensity: high: 30 days, medium: 40 days, low: 50 days/ based on brushing your teeth for 2 minutes three times a day) The time may vary depending on user. - This product has wireless charger. Gently place the main body on the cradle connected to the power source to start charging. - The light is red if the battery is less than 80%, blue if the battery level is higher than 80% when charging. While in use, the light turns redy when the battery is less than 20%, blue if the battery is higher than 80%. - The toothbrush doesn't work close to the charging cradle for safety. - The charging standard of this product is 5V 1A. Please use an adapter of the appropriate standard.(Charging may not be possible with an adapter less 5V 1A.) - When connecting the USB power source, keep it dry. It may cause fire or electric shock.
Warranty and support Warranty This product warrants for 6 months. After 6 months, costs will be charged. Please contact the salesperson or manufacturer for warranty. (However, even during the warranty period, defects due to the user's negligence, it will void this warranty.)	
6	

주의사항	한국어
사용자 주의사항 - 사용방법 및 주의사항을 충분히 숙지 한 뒤 사용하십시오. - 최근 잇몸 수술을 받았거나 잇몸이 심하게 부어있는 경우에는 전문의와 상의 후 사용하여 주십시오. - 치솔 사용 후 잇몸이 심하게 아프거나 구강 내 불편함이 생길 경우 사용을 즉시 중단하고 전문의와 상의 하십시오. - 어린이가 가지고 놀지 못하게 하십시오. 전자기기가 사용이 용이하지 않은 성인이나 13세 미만 어린이가 사용할 경우에는 보호자와 함께 사용하여 주십시오. 3세 미만의 어린이의 손이 닿지 않는 곳에 보관하여 주십시오. - 치솔을 너무 세게 밀어 사용하지 마십시오. 잇몸과 치아에 손상을 줄 수 있고 제품 고장의 원인이 될 수 있습니다.	
충전 시 주의사항 - 제품 본체 하단에 위치한 충전 LED에 적색이 깜빡거리면 충전을 해주십시오. - 본 제품에는 배터리가 내장되어 있습니다. 높은 온도나 심한 충격을 가하면 배터리 화재 및 폭발의 원인이 될 수 있습니다. - 제품 규격에 맞는 어댑터를 사용해 주십시오. 규격에 맞지 않는 어댑터 사용은 제품 고장의 원인이 될 수 있습니다.(제품의 정격 입력은 5V / 1A / 5W 입니다.) - 충전기를 욕조, 세면대 등 물기가 있는 곳에서 사용하지 마시고, 충전 시 USB단자에 물기가 있는지 확인해 주십시오. 충전기에 물기가 달으면 제품 고장 및 화재의 원인이 될 수 있습니다.	
세척 및 유지보수 시 주의사항 - 치솔모 교체 시 동봉 또는 별매로 판매되는 전용 치솔모를 사용하여 주십시오. 다른 치솔모는 호환 되지 않습니다. - 치솔 사용 후에는 치솔모를 세척한 뒤 자연 건조하여 주십시오. 치약이 남아있거나 제대로 건조되지 않으면 세균이 번식할 수 있습니다. - 사용한지 3달이 경과 되거나 치솔모가 심하게 변형된 경우에는 치솔모를 교체하여 주십시오. - 치솔모 및 치솔 본체를 소독하기 위해 끓는 물,세제 또는 화학약품에 담그지 마십시오. 제품 고장의 원인이 될 수 있습니다. - 제품을 사용하지 않을 경우에는 건조하고 선상한 곳에 보관하여 주십시오. 고온 다습한 환경은 제품 고장의 원인이 될 수 있습니다.	
7	

FAQ	한국어
진동 세기가 너무 약해요. → 치솔을 세게 눌러 양치질을 한다면 진동이 약해질 수 있습니다. 치솔을 세게 누르지 마시고, 약하게 접촉하여 사용하여 주십시오. → 치솔 헤드를 너무 강하게 장착하면 내부 모터가 망가질 수 있습니다. 치솔 헤드와 치솔 본체 사이에 1mm정도의 틈이 있는지 확인하여 주십시오. 없다면 A/S를 요청하십시오. 충전을 해도 작동이 안돼요. → 출하 시 배터리가 방전되었거나, 전원 ON/OFF 사용 미숙일 수 있습니다. 설명서를 숙지하고 충전 후 사용하십시오. 그래도 작동하지 않는다면 A/S를 요청하십시오. → 배터리 수명이 다 되었을 수 있습니다. 완충을 시키고 사용하여 주십시오. 충전이 안되거나 완충 시에도 작동이 안된다면 A/S를 요청하십시오. 충전이 잘 안돼요. → USB 전원단자에 물, 먼지와 같은 이물질이 있다면 접촉 불량일 일어날 수 있습니다. USB 전원 단자를 깨끗하게 청소하고, 건조 후 사용 하십시오. → 무선 충전 거치대와 본체가 접촉하지 않을 수 있습니다. 무선 충전 거치대 속에 이물질이 있는지 확인하시고, 이물질 제거 후에도 충전이 안된다면 A/S를 요청하십시오. 진동이 너무 강해요 / 사용 후 잇몸이 아파요. → 평소 잇몸이 약하다면 진동이 세게 느껴질 수 있습니다. 강도를 약으로 사용하시거나, 사용을 중단하고 전문의와 상의 후에 사용하십시오.	
충전할 때 발열이 너무 심해요. → 무선충전 특성 상 발열이 어느정도 존재할 수 있습니다. 이상 발열이 발생하면 즉시 충전기의 전원을 차단하고 A/S를 요청하십시오. 작동할 때 이상한 소음이 나요. → 진동을 이용하는 제품으로, 일정량의 소음이 존재합니다. 이상 소음이 계속 발생한다면 A/S를 요청하십시오. 완충된 치솔을 계속 충전기에 세워 두어도 괜찮을까요? → 본 제품에는 과충전 방지회로가 탑재되어 완충 후에는 충전이 종료됩니다. 배터리의 수명을 위하여 가급적 완충 후 충전기와 분리하는 것을 추천 드립니다.	
8	

중전	한국어
충전기와 치솔을 습한 화장실에 두어도 괜찮을까요? → 치솔은 IPX8 방수를 지원하여 괜찮습니다. 하지만 충전기는 방수를 지원하지 않음으로 권장하지 않습니다. 세균 번식 및 곰팡이 방지를 위해 서늘하고 건조한 곳에 보관하는 것을 권장 드립니다. 치솔 본체를 흐르는 물에 씻어도 괜찮을까요? → 본 제품은 IPX8 등급의 방수를 지원하므로 가능합니다. 충전기는 방수가 지원되지 않으므로 물 세척을 금합니다.	
제품정보 상품명 : SONIQ 모델명: BSET-001,BSET-02,BSET-03,BSET-04,BSETC-001 재질: ABS, PC, POM 외 정격입력: DC 5V, 1A 소비전력: 2W 모터 진동수: 30,000/ 분 무선충전 주파수: 70 KHz ± 10% 배터리 사양: 3.7V, 1100mAh 방수 등급: IPX8 크기: 180 X 28.5 X 27.5 mm(본체) 무게: 116g	
제조사 정보 제조원 : 제노스(대한민국) 경기도 수원시 영통구 청룡대로256번길 56, D-factory Tel. 031-888-5100 www.genoss.com A/S 및 제품 문의 무상 A/S 기간은 6개월이며 무상 A/S 기간이더라도 소비자 과실로 인한 수리 사유 시에는 유상으로 전환됩니다. Tel. 031-888-5100 Fax. 031-8019-9123	
9	

MS-P2886/1FU-DE1901(Rev.3,2606)

FAQ	English
The vibration strength is weak. → If you brush your teeth by pressing the toothbrush hard, the vibration may be weakened. Do not press the toothbrush too hard, but use it soft touch. → If the toothbrush head is connected too strongly , the internal motor may be damaged . Check that there is a gap of about 1mm between the toothbrush head and body . If not , please contact for customer service center. It doesn't work even when charging. → The battery needs to be fully charged for the first time. And the power ON/OFF may be inexperienced. Please read the manual carefully and use it after charging. If it still doesn't work, ask for customer Service centre. → The toothbrush is may be running out of battery . Please use it after enough charging it. If charging does not work even when charged , request customer service center Charging is not working well. → If there are water or dust on the USB connector, contact faulty may occur. Using the USB connector after cleaning and drying. → The wireless charging cradle and the body may not come into contact. Check if there are any foreign substances in the wireless charging cradle, and if charging does not work even after removing it, request replacement. The vibration is too strong. → The vibration may be felt strongly in sensitive and weak areas on the teeth . Use strength as a low mode, or stop using it and take medical attention. Occur the heat while charging. → Due to the characteristics of wireless charging, some amount of heat may exist. If heat still occurs, immediately turn off the charger and contact customer service. There is a strange noise when operating. → The product that uses vibration, a certain amount of noise exists. If the noise continues to occur, request customer service. Is it okay to keep a fully charged toothbrush standing on the charger? → This product that charge finishes after a full charge because there is including prevents overcharging. For the life of the battery, it is recommended to disconnect it from the charger after finishing charge.	
8	

중전	English
Is it okay to leave the charger and toothbrush in a moist place? →The toothbrush is not damaged because of provides IPX8 waterproof. However, it is not recommended as the charger does not support waterproofing. Store in a cool, dry place as much as possible. Is it okay to wash the toothbrush body under running water? → This product is possible because it supports IPX8 waterproof rating.The charger is not waterproof, so do not wash it with water.	
Product information Product name: SONIQ Model number: BSET-001,BSET-02,BSET-03,BSET-04,BSETC-001 Material: ABS, PC, POM and others Rated input: DC 5V, 1A Rated output(Power consumption): 2W Vibration: 30,000/min Wireless charging frequency: 70 KHz ± 10% Batteries: 3.7V, 1100mAh Waterproof rate: IPX8 Dimensions: 180 X 28.5 X 27.5 mm(body) Weight: 116g	
Manufacturer information Manufacturer: genoss co.,Ltd.(Korea) D-factory 56, Changnyong-daero 256beon-gil, Yeongtong-gu, Suwon-si, Gyeonggi-do Tel. +82-31-888-5100 www.genoss.com Customer Service The warranty period is 6 months , and even during the free warranty period, it is converted to a paid service in case of repair due to consumer negligence. Tel. +82-31-888-5100 Fax. +82-31-8019-9123	
9	